

**2 sec = OFF**

Lino L2G

**Transportation**

User Manual:



[www.leica-geosystems.com](http://www.leica-geosystems.com)

	<b>LASER</b> 2	
IEC 60825-1:2014	λ=510-520nm	Pmax<1mW
		tp=35-65us, cw

SAP. No. 864426

- when it has to be right



**Adapter setup**

5/8"  
1/4"

**Usable with UAL 130**

**Usable with Receiver**

# Quick Start

## Leica Lino L2G

- Status LED
- Laser key
- Battery pack
- Window of vertical line
- Window of horizontal line
- Levelling lock
- Tripod thread 1/4"


- when it has to be right




### Insert batteries/Li-Ion




### 1x - Laser on

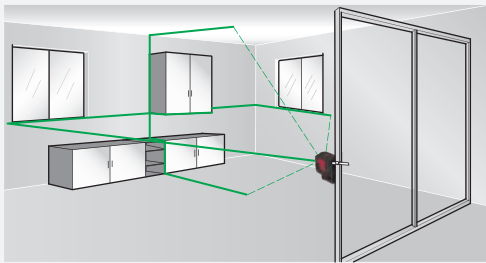

### 3x - Vertical mode

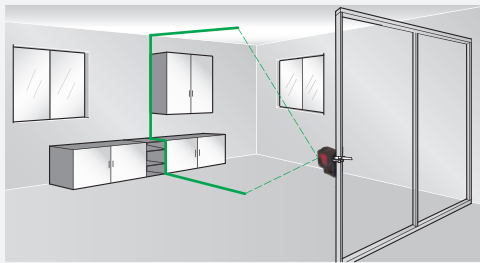


### Charging Li-Ion battery

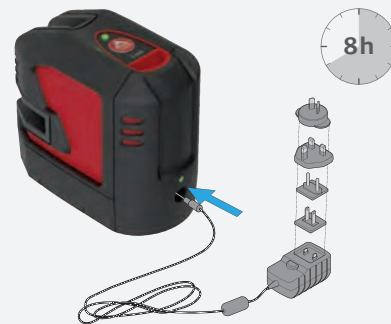

### Self levelling / Levelling lock



### 2x - Horizontal mode

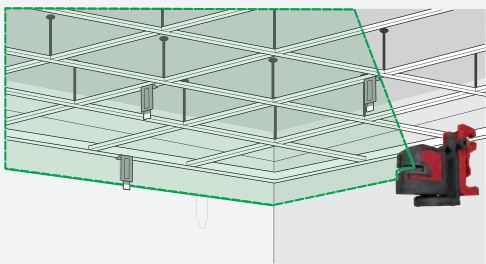

### Status LED

